

EZ-SnapJack™

Compatible with industry standard wall plates.


Meets/Exceeds TIA/EIA-568-B.2-1



Prep cable

Insert wire guide

Snap together

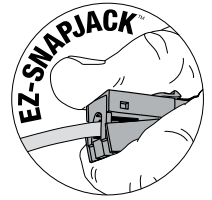

EZ-SnapJack™

First the EZ-RJ45®, now the EZ-SnapJack! You may never again need a punchdown tool. At least for your wall jacks! The patented EZ-SnapJack is self-terminating and quickly installs for professional results in a snap.

- Save time – No need for eight punch downs
- Repair damaged jacks on the spot
- EZ-SnapJacks are re-useable
- Wire guide ensures pairs stay in proper order for fast, easy termination
- Reduced tool cost, no PDT required
- Your tool bag weighs less

Application

- Available for both Cat5e and Cat6
- Designed to fit industry standard wallplates
- Commercial network installations, new or retrofit
- Home automation installations, new or retrofit

Technical Data

- F.C.C., UL, ULC & RoHS compliant
- 50 micro-inch selective gold plating
- Molded from UL94-VO material
- Meets/Exceeds TIA/EIA-568-B.2-1

Order Info

P/N's and color selection for both Cat5e and Cat6 EZ-SnapJacks are on the reverse side.

See reverse for additional information.

Phone: 800.749.5783

Fax: 800.749.5784

California, USA


www.platinumtools.com

We Make Connections EZ!

EZ-SnapJack Instructions



©2015 Platinum Tools Inc. All rights reserved. 08/15

- 1) Remove 2" of the outer cable jacket using P/N 15015, Cat5e/6 Cable Jacket Stripper.
- 2) Separate pairs and follow the color code on the wire guide bar, per the A or B.




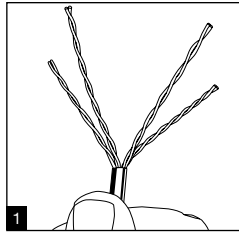


Important:
See wiring tip to the right.



- 3) Insert the conductors through the holes of the wire guide bar.
- 4) Slide the wire guide all the way down to the outer cable jacket so that it fits up against the twisted pairs of the cable.

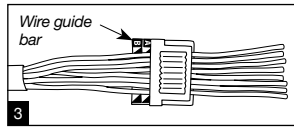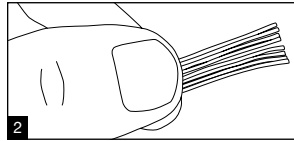

- 5) Cut off the extra wire extending from the guide so that it is flush with the wire guide edge using the Flush Cutter, P/N 10531.

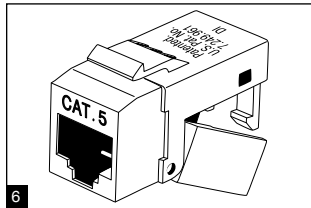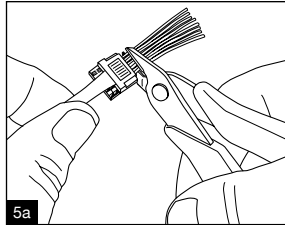


- 6) Open the EZ-SnapJack so that the hinged portion is on the bottom at 6 o'clock. Then rotate to 3 o'clock.

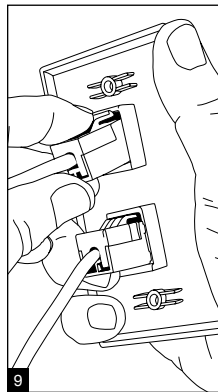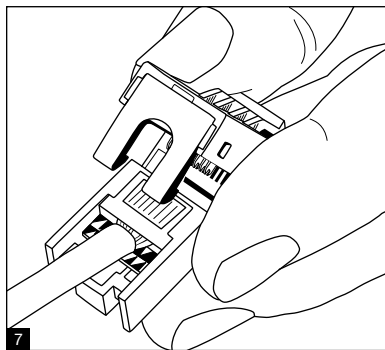


- 9) Insert the terminated EZ-SnapJack into the backside of the wall plate.

- 7) Insert the prepped wire guide into the hinged portion, pushing it forward until it stops. Hold it in this position.

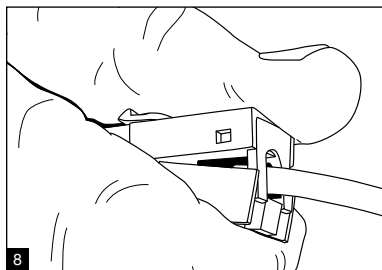

- 8) Close the hinged portion until it 'snaps' and latches into place.

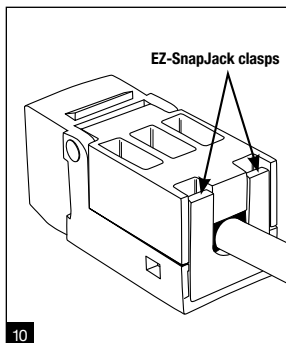

- 10) **To Re-Open SnapJack:** Using a small slotted screwdriver, lightly pry open the two EZ-SnapJack clasps.

PLATINUM TOOLS®

Wiring Tip

The color code on the wire guide bar is correct! Follow it, it will work!

The pairing is different: 2-1 / 3-6 / 4-5 / 8-7 but will be transposed to the port in the T568 A or B pairing which is: 1-2 / 3-6 / 5-4 / 7-8.




EZ-SnapJack™ Cat5e

		Bulk Bag 1 EA	Clam Pk. 4 EA	Installer Pk. 40 EA
White	○ EZ-SnapJack Cat5e White	705WH-1	705WH-4C	705WH-40
Light Almond	○ EZ-SnapJack Cat5e Light Almond	705LA-1	705LA-4C	705LA-40
Blue	● EZ-SnapJack Cat5e Blue	705BL-1	705BL-4C	705BL-40
Ivory	● EZ-SnapJack Cat5e Ivory	705IV-1	705IV-4C	705IV-40
Black	● EZ-SnapJack Cat5e Black	705BK-1	705BK-4C	705BK-40
Yellow	● EZ-SnapJack Cat5e Yellow	705YL-1	705YL-4C	705YL-40
Orange	● EZ-SnapJack Cat5e Orange	705OR-1	705OR-4C	705OR-40

EZ-SnapJack™ Cat6

White	○ EZ-SnapJack Cat 6 White	706WH-1	706WH-4C	706WH-40
Light Almond	○ EZ-SnapJack Cat 6 Light Almond	706LA-1	706LA-4C	706LA-40
Blue	● EZ-SnapJack Cat 6 Blue	706BL-1	706BL-4C	706BL-40
Ivory	● EZ-SnapJack Cat 6 Ivory	706IV-1	706IV-4C	706IV-4C
Black	● EZ-SnapJack Cat 6 Black	706BK-1	706BK-4C	706BK-40
Yellow	● EZ-SnapJack Cat 6 Yellow	706YL-1	706YL-4C	706YL-40
Orange	● EZ-SnapJack Cat 6 Orange	706OR-1	706OR-4C	706OR-40

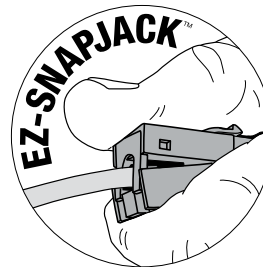

Phone: 800.749.5783

Fax: 800.749.5784

California, USA

www.platinumtools.com

We Make Connections EZ!